



Qualcomm Technologies, Inc.

Qualcomm IQ-X Series Evaluation Kit- Ubuntu

Bringup guide

80-77183-266 Rev. AA

March 6, 2026

Revision history

Revision	Date	Description
AA	March 2026	Initial release

Contents

1	Introduction	6
1.1	Conventions	6
1.2	Technical assistance	6
2	IQ-X series carrier board–peripheral interface connectors	7
3	Configure DIP switch settings	9
4	Optional: Download and set up Alpaca control	11
5	Download and flash software	13
5.1	Power up and power cycle	13
5.1.1	Power up the IQ-X series EVK	14
5.1.2	Power cycle the EVK.....	16
5.2	Flash the software images to the Dragonwing IQ-X EVK.....	16
5.2.1	Prerequisites	16
5.2.2	Set up the Ubuntu host.....	17
5.2.3	Set up the Windows host	21
A	References	25
A.1	Related documents	25
A.2	Acronyms and terms	25

Figures

Figure 2-1 Top view of IQ-X series carrier board	7
Figure 2-2 Bottom view of IQ-X series carrier board	8
Figure 3-1 DIP switch settings for default SPINOR + UFS and Bluetooth setup.....	9
Figure 5-1 Power up options on IQ-X series carrier board	13
Figure 5-2 Connecting the IQ-X board to the host computer	17

Tables

Table 3-1 DIP switch settings	9
Table 3-2 S2, S3, and S4 DIP switches	10
Table 5-1 DIP switch settings	14
Table 5-2 DIP switch setting for Boot mode configuration.....	16

1 Introduction

The IQ-X series evaluation kit (EVK) includes a carrier board and a module. This bringup guide helps you set up the IQ-X series EVK and understand the peripheral interface on the carrier board. Additionally, this guide provides step-by-step instructions to set up the IQ-X Series Evaluation Kit (EVK), establish communication with host systems and software flashing procedures.

NOTE: This is a preview (beta) version of the document. The production version will be released at a later time.

For information about IQ-X series module, see the documents listed in [Related documents](#).

1.1 Conventions

Function declarations, function names, type declarations, attributes, and code samples appear in a different font, for example, `cp armcc armcpp`.

Code variables appear in angle brackets, for example, `<number>`.

Commands to be entered appear in a different font, for example, **copy a:*. * b:**. Button and key names appear in bold font, for example, click **Save** or press **Enter**.

1.2 Technical assistance

For assistance or clarification on information in this document, go to www.qualcomm.com/support

2 IQ-X series carrier board–peripheral interface connectors

The following figure shows the location of various peripheral interface connectors from the top view of the IQ-X series carrier board.

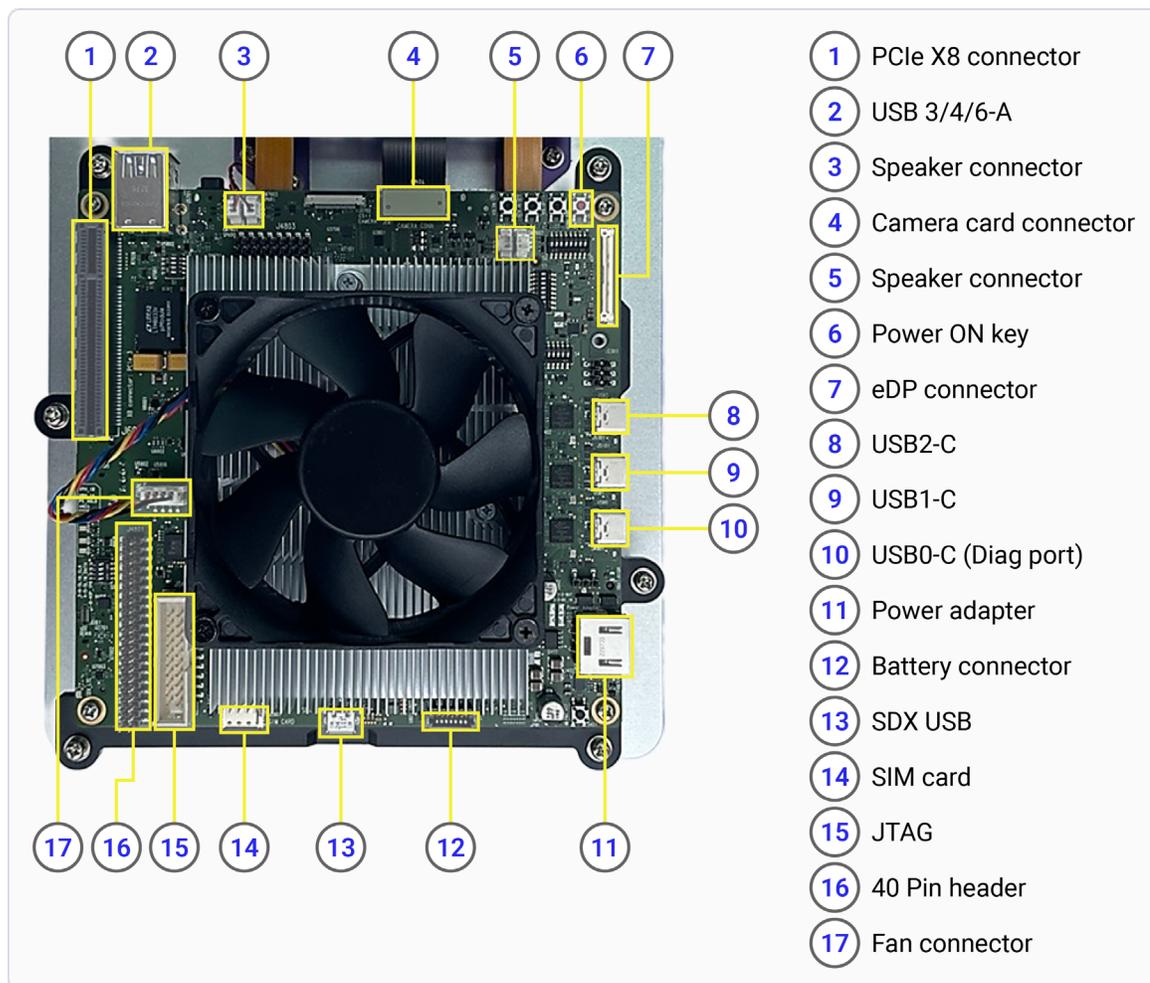


Figure 2-1 Top view of IQ-X series carrier board

The following figure shows the location of various peripheral interface connectors from the bottom view of the IQ-X series carrier board.

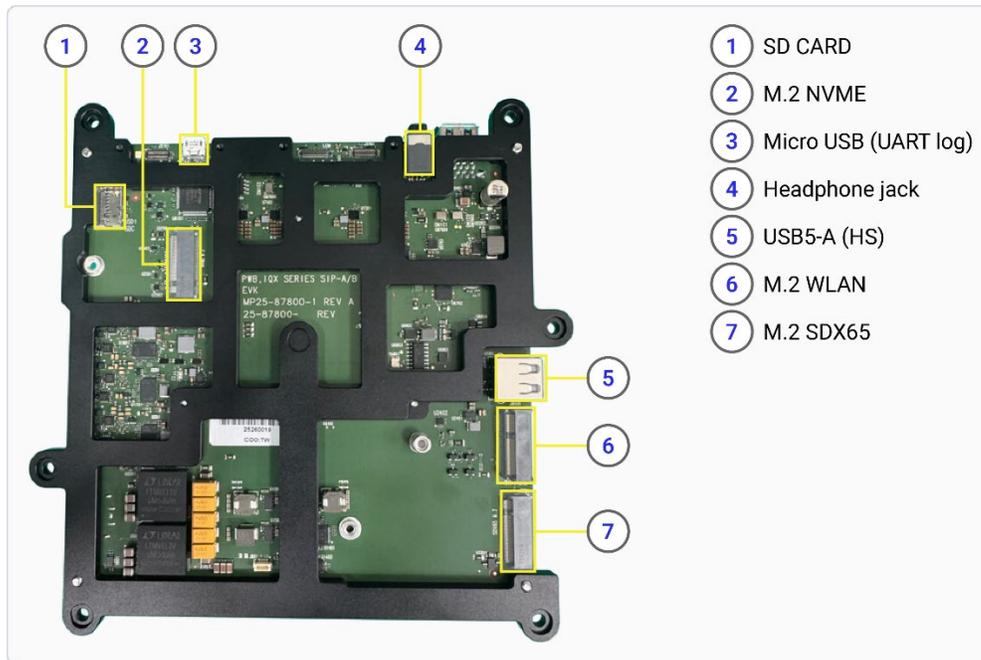


Figure 2-2 Bottom view of IQ-X series carrier board

3 Configure DIP switch settings

The following figure shows the dual in-line package (DIP) switch settings to set up the default SPINOR and universal flash storage (UFS) mode on the IQ-X series carrier board.

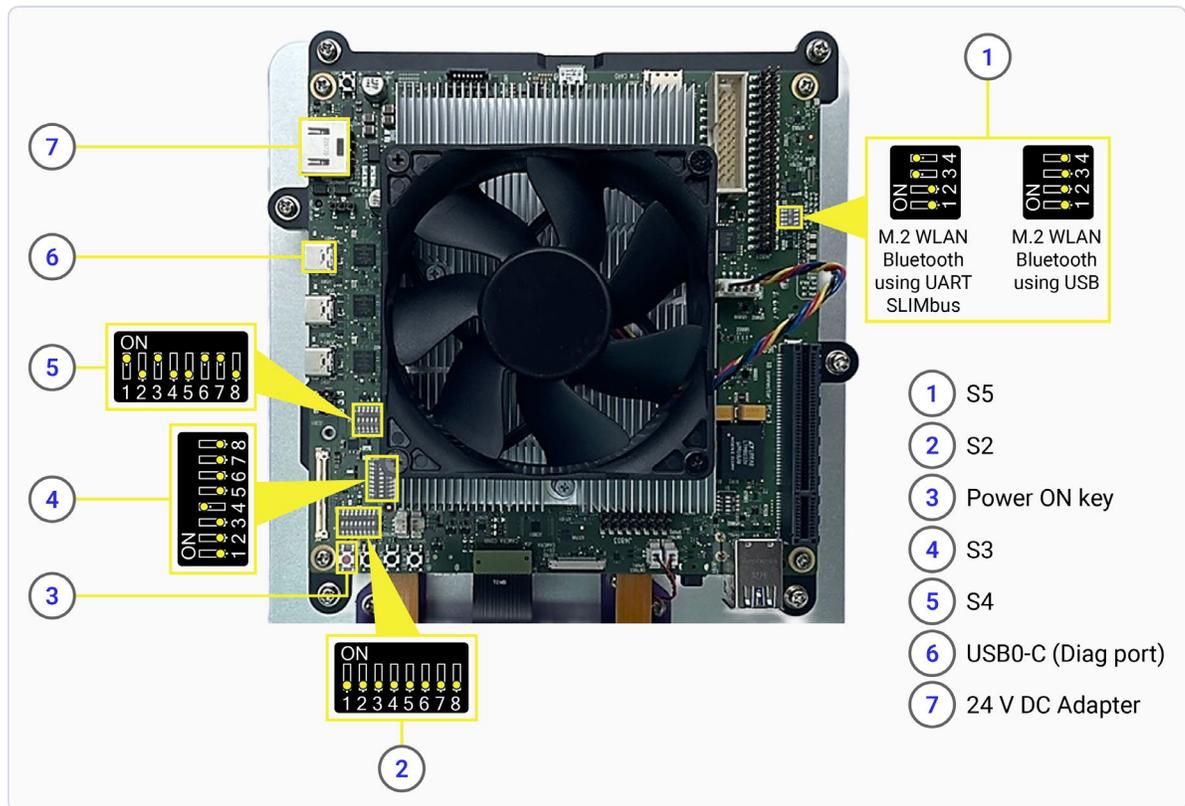


Figure 3-1 DIP switch settings for default SPINOR + UFS and Bluetooth setup

The following table describes the ON and OFF positions of the DIP switches for the SPINOR and UFS mode.

Table 3-1 DIP switch settings

Switch	Description	
	ON	OFF
S2-4	Emergency download (EDL) mode	Normal mode
S3-4	FAST BOOT [0] → 1	FAST BOOT [0] → 0
S4-1	FAST BOOT [2] → 1	FAST BOOT [2] → 0
S4-3	FAST BOOT [1] → 1	FAST BOOT [1] → 0

Switch	Description	
	ON	OFF
S4-2	FAST BOOT [3] → 1	FAST BOOT [3] → 0
S4-5	Enables BAT_THERM resistor on board	Uses BAT_THERM resistor in battery
S4-6	Enables BAT_ID resistor on board	Uses BAT_ID resistor in battery
S4-7		
S5-3	Bluetooth using UART and SLIMbus	Bluetooth using USB
S5-4	Bluetooth using UART and SLIMbus	Bluetooth using USB

The following table lists the description of the S2, S3, and S4 DIP switches:

Table 3-2 S2, S3, and S4 DIP switches


Pins	Function
DIP switch S2	
8-9	VXT2_3P3_DIS
7-10	EUD_ENABLE
6-11	ELDO_3P3_EN
5-12	BOOT_SPEED1
4-13	FORCE USB BOOT
3-14	BOOT_SPEED0
2-15	SYSTEM_THROTTLE
1-16	SDX_FORCE_USB
DIP switch S3	
8-9	DDR3_CH_SEL
7-10	SDX_PCIE_INIT
6-11	SDX_FB2
5-12	WDOG_DISABLE
4-13	FBO
3-14	FORCE_PS_HOLD
2-15	VBATT_HIGH
1-16	AUTO_PWR_EN
DIP switch S4	
8-9	UART_SEL
7-10	BATT_ID
6-11	BATT_ID
5-12	BATT_THERM
4-13	DEAD_BATT_CHG
3-14	FB1
2-15	FB3
1-16	FB2

4 Optional: Download and set up Alpaca control


Alpaca control is a suite of applications that provide device control and power measurement functions through the Alpaca and Embedded Power Measurement (EPM) debug boards.

To set up the Alpaca control, do the following:

1. Download the Alpaca Control Interface from [Qualcomm® Package Manager](#).
2. Connect the Micro USB (UART log/Alpaca) to PC.
3. In the **Device Manager**, select the new USB Serial Port.

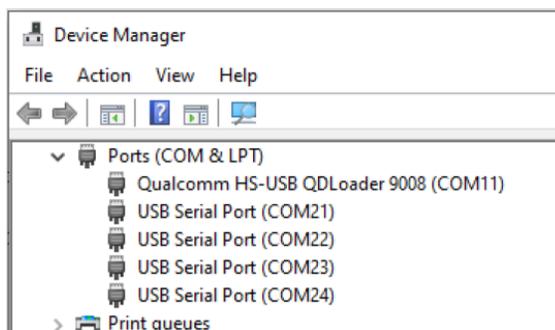


4. In the Alpaca Control Interface, connect to the VTP# and click **OK**.

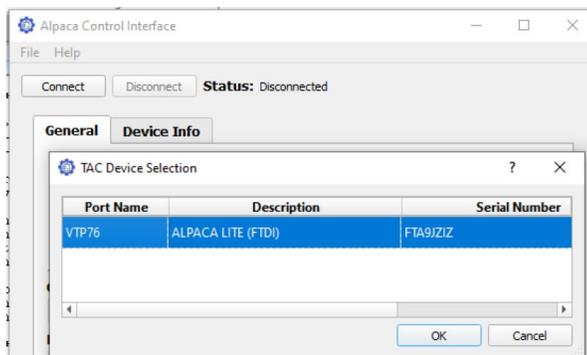

NOTE: The port name VTP# varies from board to board.

5. In the **General** tab, use **Buttons** for Quick Settings to Power On, Power Off, Boot to EDL, and Boot to unified extensible firmware interface (UEFI).
6. Use **Quick Settings** to use Buttons for Power Key, Volume Up, and Volume Down.

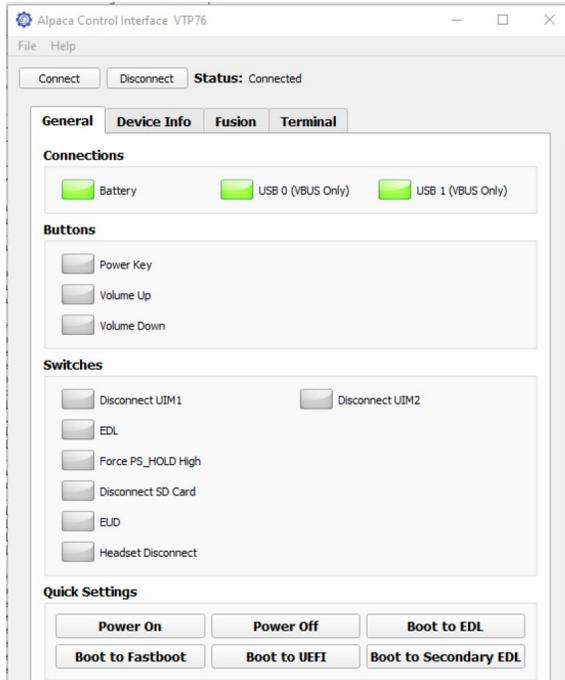

5 Download and flash software

This chapter describes how to download and flash the software on the IQ-X series carrier board.

5.1 Power up and power cycle

The IQ-X series carrier board is preloaded with software to set up the device. If no image is loaded, the device enters EDL mode when powered on. The following figure shows the location of the interfaces used to power up the device:

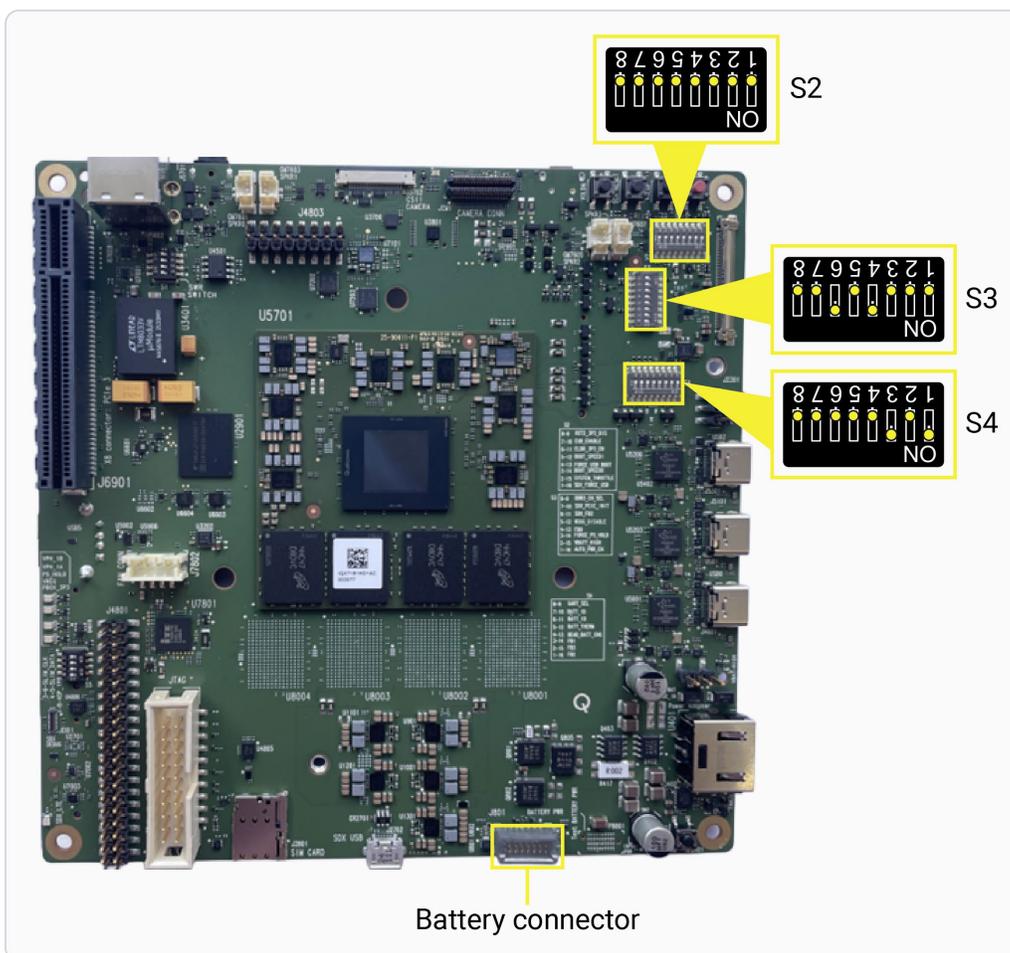


Figure 5-1 Power up options on IQ-X series carrier board

Table 5-1 DIP switch settings

Switch	Description	
	ON	OFF
S2-4	EDL mode	Normal mode
S3-4	FAST BOOT [0] → 1	FAST BOOT [0] → 0
S4-1	FAST BOOT [2] → 1	FAST BOOT [2] → 0
S4-3	FAST BOOT [1] → 1	FAST BOOT [1] → 0
S4-2	FAST BOOT [3] → 1	FAST BOOT [3] → 0
S4-6	Enables BAT_ID resistor on board	Uses BAT_ID resistor in battery
S4-7		

5.1.1 Power up the IQ-X series EVK


The IQ-X series EVK carrier board supports three power source options with specific DIP switch settings for each power source option.

CAUTION: Don't use the DC power adapter simultaneously with the battery.

NOTE: The current EVK carrier board does not support USB Type-C Power Delivery (PD) for power input or battery charging. Support for this feature will be introduced in later EVK versions.


Set up power source

1. DC power adapter: To power up the EVK using DC power adapter (24 V/20 V, 180 W), turn OFF the S3-6 DIP switch.

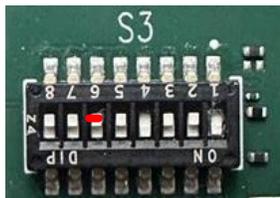


2. Battery (3S battery or fake battery):

- To power up the EVK using 3S battery, turn ON the S3-6 DIP switch and turn OFF the S4-5, S4-6, and S4-7 DIP switches.

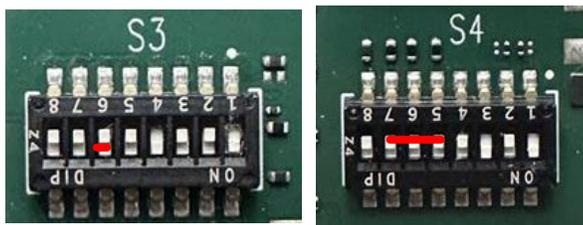

- To power up the EVK using fake battery, turn ON the S3-6, S4-5, S4-6, and S4-7 DIP switches.

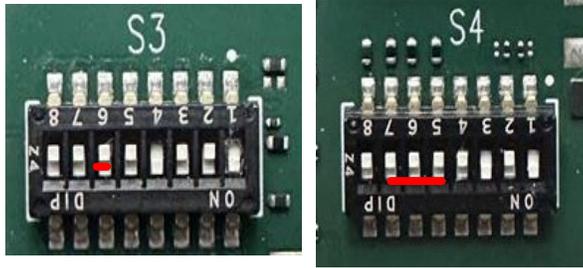


If the power source is ready, the VPH_PWR_1A and VPH_PWR_1B LEDs should illuminate.



Trigger power up

Use Power ON key or Auto Power ON option to power up the EVK.


3. To power up the EVK using the Power ON key, press the Power ON key. (Turn OFF the S3-1 DIP switch.)

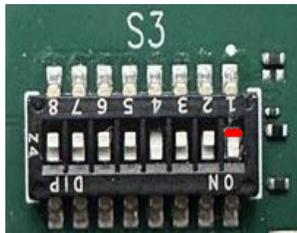

After power up, ensure that the VREG_PREBUCK_3P3 and PS_HOLD LEDs illuminate.



4. To power up the EVK using Auto Power ON, turn ON the S3-1 DIP switch before connecting the power source.

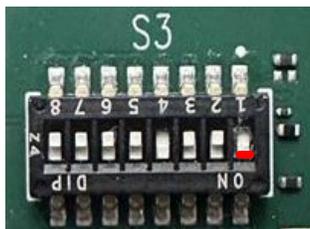

After plugging in the power source, the VREG_PREBUCK_3P3 and PS_HOLD LEDs illuminate.

Configure boot mode

Boot mode configuration of the S2-4 DIP switch: For the EDL mode, turn ON S2-4 and for Normal mode, turn OFF S2-4.

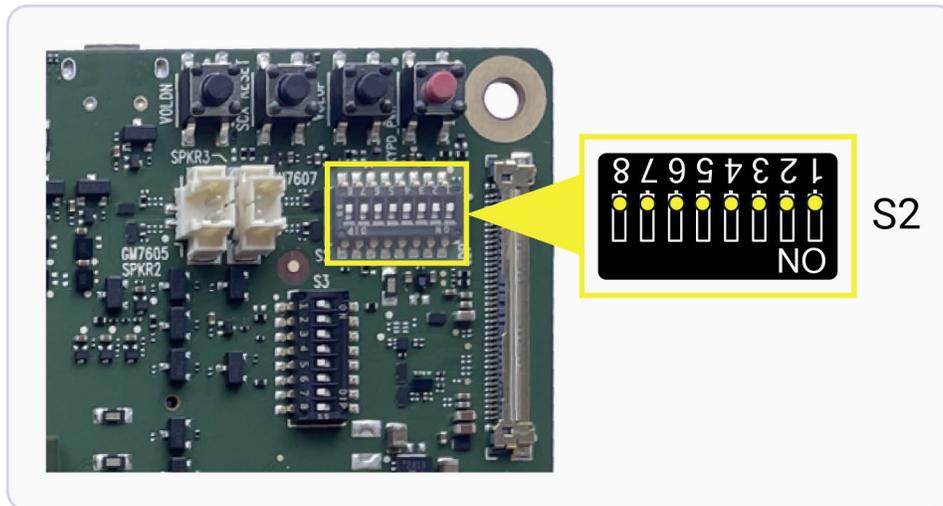


Table 5-2 DIP switch setting for Boot mode configuration

Switch	Description	
	ON	OFF
S2-4	EDL mode	Normal mode

5.1.2 Power cycle the EVK

To power cycle the EVK, do the following:

1. Disconnect the power source (DC adapter, battery, Type C PD).
2. Disconnect the USB Type-C cable (USB0-C, USB1-C, USB2-C) (if connected).
3. Follow the [power up procedure](#).

5.2 Flash the software images to the Dragonwing IQ-X EVK

Download and integrate the software images, and flash them onto the Dragonwing IQ-X EVK.

5.2.1 Prerequisites

Ensure that you have the following required hardware and peripherals ready:

Requirement	Description
Host Computer OS	Ubuntu or Windows OS

Requirement	Description
Development kit	Dragonwing IQ-X EVK
USB cable	One USB Type-C to USB Type-A cable for flashing the image to the Dragonwing IQ-X EVK
Serial Cable	One Micro-USB to USB Type-A cable for the UART debug port

Follow the setup steps based on your host computer's operating system (OS).

5.2.2 Set up the Ubuntu host

To set up the environment in the Ubuntu OS, set up the debug UART. Don't log in to the console at this stage.

1. Connect one end of a Micro-USB cable to the Micro-USB port on the Dragonwing IQ-X EVK.



Figure 5-2 Connecting the IQ-X board to the host computer

2. Connect the other end of the Micro-USB cable to the host computer.
3. Install the `Screen` application on the Ubuntu host computer:


```
$ sudo apt update
$ sudo apt install screen
```
4. Verify the USB port:


```
$ ls /dev/ttyUSB*
```

Sample output

```
$ /dev/ttyUSB0
```
5. Open the debug UART:


```
$ sudo screen <serial_port> <baud_rate>
```

Example command:

```
$ sudo screen /dev/ttyUSB0 115200
```

5.2.2.1 Download the Ubuntu OS image and boot firmware

To download the prebuilt Ubuntu Server or Desktop OS image and the boot firmware, do the following:

1. Go to the [Canonical® Ubuntu on Qualcomm IoT](#) site.
2. On the landing page, locate the Choose a board panel. From the list of platforms, select "Qualcomm Dragonwing Evaluation Kit IQ-X (EVK)" After selecting the board, the page

displays the available Ubuntu images for this platform. Choose one of the following based on your requirement:

- a. Ubuntu Desktop for Qualcomm Dragonwing IQ-X (EVK) or
 - b. Ubuntu Server for Qualcomm Dragonwing IQ-X (EVK).
3. Download the below files onto the host computer and the [section 5.2.2.2](#) explains how to download each of the images and prepare the final flashable folder .

Filename	Description
rawprogram0.xml	Raw program
<ubuntu_image>.img.xz	Ubuntu desktop image
<boot_firmware>.tar.gz	Boot firmware

NOTE: Download the `rawprogram0.xml` file corresponding to the same Ubuntu variant you selected. Use Desktop files for Ubuntu Desktop and Server files for Ubuntu Server.

5.2.2.2 Prepare the flashable folder on Ubuntu host

Follow these steps to prepare the flashable folder:

1. Create a folder for the flashable images. As an example, the following command creates the `iqx_ubuntu_images` directory.


```
$ cd <workspace_dir>
$ mkdir iqx_ubuntu_images
```

NOTE: `<workspace_dir>` indicates the directory where the Ubuntu OS image, boot firmware, and relevant files are downloaded.

2. From the [Canonical website](#)
 - i Download the boot firmware and copy the contents of unzipped folder of boot firmware into the `iqx_ubuntu_images` folder.
 - ii Make the following changes in `iqx_ubuntu_images/<boot_firmware>/partition_spinor / rawprogram0.xml`:

```
-- <program start_sector="13494" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="dtb.bin" sparse="false"
start_byte_hex="0x34b6000" SECTOR_SIZE_IN_BYTES="4096"
label="dtb_a"/>
-- <program start_sector="14518" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="dtb.bin" sparse="false"
start_byte_hex="0x38b6000" SECTOR_SIZE_IN_BYTES="4096"
label="dtb_b"/>
++ <program start_sector="13494" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="" sparse="false"
start_byte_hex="0x34b6000" SECTOR_SIZE_IN_BYTES="4096"
```

```
label="dtb_a"/>
++ <program start_sector="14518" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="" sparse="false"
start_byte_hex="0x38b6000" SECTOR_SIZE_IN_BYTES="4096"
label="dtb_b"/>
```

- iii Download the <ubuntu_image>.xz and unzip the package to get a raw image file


```
$ unxz ubuntu_image
```

Example:

```
$ unxz iot-qualcomm-dragonwing-classic-server-2510-x01-20260227.4096b.img.xz.
```
- iv Copy the Ubuntu raw <ubuntu_image> file to the iqx_ubuntu_images folder.


```
$ cp <ubuntu_image> ./ iqx_ubuntu_images
```

Example

```
$ cp iot-qualcomm-dragonwing-classic-server-2510-x01-20260227.4096b.img ./iqx_ubuntu_images.
```
- v Download rawprogram0.xml from [Ubuntu server/Ubuntu desktop](#) and copy to the iqx_ubuntu_images folder.

5.2.2.3 Flash Dragonwing IQ-X EVK integrated image on Ubuntu host

To flash the Dragonwing IQ-X EVK integrated image using Ubuntu host, do the following:

1. Move the Dragonwing IQ-X EVK into the [Emergency Download \(EDL\)](#) mode.
 - a. .Connect the Dragonwing IQ-X EVK to a 12 V wall power supply.
 - b. Connect the Dragonwing IQ-X EVK to the host computer through the USB Type-C connector.
 - c. Verify whether the Dragonwing IQ-X EVK has entered the EDL mode by running the following command on the host computer:

```
$ lsusb
```

Sample output

```
Bus 002 Device 014: ID 05c6:9008 Qualcomm, Inc. Gobi Wireless Modem (QDL mode)
```

NOTE: Turn off the SW2-4 DIP switch after flashing the software.

2. Update the udev rules.
 - a. Go to the udev configuration directory:


```
$ cd /etc/udev/rules.d
```
 - b. List the contents of the directory:


```
$ ls
```

 - i If the 51-qcom-usb.rules file isn't present, run the following command to create it.


```
$ sudo vi 51-qcom-usb.rules
```
 - ii Add the following content to the file 51-qcom-usb.rules:


```
SUBSYSTEMS=="usb", ATTRS{idVendor}=="05c6", ATTRS{idProduct}=="9008", MODE="0664", GROUP="plugdev"
```
 - iii If the file exists, check for the earlier content. Run the following command to view the content:


```
$ cat 51-qcom-usb.rules
```

- c. Restart udev:


```
$ sudo systemctl restart udev
```

If the USB cable is already connected to the host computer, disconnect and reconnect it to apply the updated rules.

3. Use the **QDL** tool to flash the software onto the Dragonwing IQ-X EVK:
 - a. Download the [QDL tool](#) and unzip the contents of the downloaded folder.
 - b. Provide executable permission by running the following command:


```
$ chmod +x ./qdl
```

NOTE: For more information about QDL tool usage, see the **QDL_User_Guide** in your unzipped `qdl` directory.

- c. Perform CDT flashing using the procedure below:
 - i. Download the IQ-X.1.2-EVK-CDT.tar.gz files from [Jfrog](#).
 - ii. Unzip the boot binaries.
 - iii. Put the device in [EDL mode](#).
 - iv. Verify whether the Dragonwing IQ-X EVK has entered the EDL mode by running the following command on the host computer:

```
$ lsusb
```

Sample output

```
Bus 002 Device 014: ID 05c6:9008 Qualcomm, Inc. Gobi Wireless Modem (QDL mode)
```

- v. Navigate to SPINOR directory


```
$ cd IQ-X.1.2-EVK-CDT/spinor
```
- vi. Run QDL using command:


```
$ <qdl_tool_path>/qdl xbl_s_devprg_ns.melf rawprogram0.xml patch0.xml
```
- vii. After successful CDT flashing, the following logs are displayed

```
waiting for programmer...
flashed "cdt" successfully
flashed "PrimaryGPT" successfully
flashed "BackupGPT" successfully
11 patches applied
```

- d. Perform UFS provisioning using the procedure below:
 - i. Download the provisioning.zip file from [Jfrog](#) and unzip it.
 - ii. Put the device in [EDL mode](#).
 - iii. Navigate to provisioning directory


```
$ cd provisioning
```
 - iv. To provision UFS, run the following commands


```
$ <qdl_tool_path>/qdl --storage ufs prog_firehose_ddr.elf <Provision file>
```

Example

```
$ <qdl_tool_path> /qdl --storage ufs prog_firehose_ddr.elf provision.xml
```
- e. Flash the Ubuntu software images

NOTE: To perform UFS flashing, switch on SW4-1.

- i Go to `iqx_ubuntu_images/<boot_firmware>/partition_spinor` and flash the boot binaries by running the following commands:

```
$ <qdl_tool_path>/qdl --storage spinor xbl_s_devprg_ns.melf  
rawprogram0.xml patch0.xml
```
- ii Go to `iqx_ubuntu_images`
- iii Navigate to `<boot_firmware>/partition_spinor`, copy the `xbl_s_devprg_ns.melf` file to `iqx_ubuntu_images`.

```
$ cd iqx_ubuntu_images  
$ cp <boot_firmware>/partition_spinor/xbl_s_devprg_ns.melf ./
```

Example

```
$ cp IQ-X.1.4-Ver.1.1-ubuntu-X1E80100-nhlos-  
bins/partition_spinor/xbl_s_devprg_ns.melf ./
```
- iv Flash the ubuntu images by running the following command from the `iqx_ubuntu_images` folder:

```
<qdl_tool_path>/ qdl --storage ufs /xbl_s_devprg_ns.melf  
rawprogram0.xml
```

5.2.3 Set up the Windows host

1. Set up debug UART. **Don't** log in to the console at this stage.
 - a. Connect one end of a Micro-USB cable to the Micro-USB port on the Dragonwing IQ-X EVK.



- b. Connect the other end of the Micro-USB cable to the host computer.
- c. Download [PuTTY](#) for your Windows host computer. Choose the correct version for your Windows (32-bit or 64-bit).
- d. Run the installation wizard and follow the on-screen instructions.

- e. After installation, open PuTTY. You can either find it from *Start > Installed apps*, or locate it using the taskbar search.
- f. In the PuTTY Configuration dialog, do the following:
 - i. Select *Serial*.
 - ii. Specify a *Serial line* based on the UART port detected on the *Windows Device Manager*.

NOTE: If the UART port isn't detected, do the following:

1. On x86: Go to the USB-to-UART serial driver page. The driver auto-downloads. Update it through the Device Manager.
2. On Arm: Go to the FTDI USB to serial drivers page. In the Drivers section, select FTDI CDM VCP Drivers. The driver download starts. Update it through the Device Manager.

- iii. Set the baud rate to **115200**.
- iv. Select *Open* to start a PuTTY session.

Result: You have installed [PuTTY](#) and configured the debug UART.

5.2.3.1 Download the Ubuntu OS image and boot firmware

To download the prebuilt Ubuntu Server or Desktop OS image and the boot firmware, do the following:

1. Go to the [Canonical® Ubuntu on Qualcomm IoT](#) site.
2. On the landing page, locate the Choose a board panel. From the list of platforms, select "Qualcomm Dragonwing Evaluation Kit IQ-X (EVK)" After selecting the board, the page displays the available Ubuntu images for this platform. Choose one of the following based on your requirement:
 - a. Ubuntu Desktop for Qualcomm Dragonwing IQ-X (EVK) or
 - b. Ubuntu Server for Qualcomm Dragonwing IQ-X (EVK).
3. Download the below files onto the host computer and the [section 5.2.3.2](#) explains how to download each of the images and prepare the final flashable folder.

Filename	Description
rawprogram0.xml	Raw program
<ubuntu-image>.img.xz	Ubuntu image
<boot-firmware>.tar.gz	Boot firmware

NOTE: Download the `rawprogram0.xml` file corresponding to the same Ubuntu variant you selected. Use Desktop files for Ubuntu Desktop and Server files for Ubuntu Server.

5.2.3.2 Prepare the flashable folder on Windows host

Follow these steps to prepare the flashable folder :

1. Create a directory for the flashable images. For example, `iqx_windows_images`.
2. From the [Canonical website](#)
 - a. Download the boot firmware and copy the contents of unzipped folder of boot firmware into the `iqx_windows_images` folder.
 - b. Make the following changes in `iqx_ubuntu_images/<boot_firmware>/partition_spiner / rawprogram0.xml`:

```
-- <program start_sector="13494" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="dtb.bin" sparse="false"
start_byte_hex="0x34b6000" SECTOR_SIZE_IN_BYTES="4096"
label="dtb_a"/>
-- <program start_sector="14518" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="dtb.bin" sparse="false"
start_byte_hex="0x38b6000" SECTOR_SIZE_IN_BYTES="4096"
label="dtb_b"/>
++ <program start_sector="13494" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="" sparse="false"
start_byte_hex="0x34b6000" SECTOR_SIZE_IN_BYTES="4096"
label="dtb_a"/>
++ <program start_sector="14518" size_in_KB="4096.0"
physical_partition_number="0" partofsingleimage="false"
file_sector_offset="0" num_partition_sectors="1024"
readbackverify="false" filename="" sparse="false"
start_byte_hex="0x38b6000" SECTOR_SIZE_IN_BYTES="4096"
label="dtb_b"/>
```

- c. Download `<ubuntu_image>` and unzip the package to get a raw image file.
- d. Copy the extracted ubuntu image to the `iqx_windows_images` folder.
- e. Download `rawprogram0.xml` from [Ubuntu server/Ubuntu desktop](#) and copy to the `iqx_ubuntu_images` folder

5.2.3.3 Flash Dragonwing IQ-X EVK integrated image on Windows host

1. Move the Dragonwing IQ-X EVK into the [EDL mode](#).
 - a. Connect the Dragonwing IQ-X EVK to a 12 V wall power supply.
 - b. Connect the Dragonwing IQ-X EVK to the host computer through the USB Type-C connector.
 - c. Verify whether the Dragonwing IQ-X EVK has entered the EDL mode by running the following command on the host computer:

```
$ lsusb
```

Sample output

```
Bus 002 Device 014: ID 05c6:9008 Qualcomm, Inc. Gobi Wireless Modem
(QDL mode)
```

NOTE: Turn off the SW2-4 DIP switch after flashing the software.

2. Download the [QDL tool](#) and unzip the contents of the downloaded folder.
3. Uninstall any other drivers for the device. Ensure that drivers like Qualcomm USB driver aren't installed. The device shouldn't appear under **COM Ports** in the **Device Manager**.
4. Run the `install_driver.bat` file extracted from the unzipped downloaded folder.
5. Perform [CDT flashing](#) on the Dragonwing IQ-X EVK
6. Perform [UFS provisioning](#) on the Dragonwing IQ-X EVK
7. Flash the Ubuntu software images

NOTE: To perform UFS provisioning, switch on SW4-1

- a. Go to `iqx_windows_images /<boot_firmware>/ partition_spinor` and flash the boot binaries by running the following commands:

```
$ <qdl_tool_path>/qdl --storage spinor xbl_s_devprg_ns.melf  
rawprogram0.xml patch0.xml
```
- b. Go to `iqx_windows_images`
- c. Navigate to `<boot_firmware>/partition_spinor`, and copy the `xbl_s_devprg_ns.melf` file to the `iqx_windows_images`.
- d. Flash the boot binaries by running the following commands

```
$ <qdl_tool_path>/ qdl --storage ufs /xbl_s_devprg_ns.melf  
rawprogram0.xml
```

A References

A.1 Related documents

Title	Number
Qualcomm Technologies, Inc.	
<i>IQ-X Series Module Data Sheet</i>	80-77181-1
<i>IQ-X Series Module Pin Assignment and GPIO Configuration Specification Spreadsheet</i>	80-77181-1A
<i>IQ-X Series Module Technical Reference Manual</i>	80-77181-5

A.2 Acronyms and terms

Acronym or term	Definition
DIP	Dual in-line package
EVK	Evaluation kit
NVMe	Non-Volatile Memory Express
UFS	Universal flash storage
UART	Universal asynchronous receiver/transmitter
UEFI	Unified extensible firmware interface
QDL	Qualcomm Downloader

LEGAL INFORMATION

Your access to and use of this material, along with any documents, software, specifications, reference board files, drawings, diagnostics and other information contained herein (collectively this “Material”), is subject to your (including the corporation or other legal entity you represent, collectively “You” or “Your”) acceptance of the terms and conditions (“Terms of Use”) set forth below. If You do not agree to these Terms of Use, you may not use this Material and shall immediately destroy any copy thereof.

1) Legal Notice.

This Material is being made available to You solely for Your internal use with those products and service offerings of Qualcomm Technologies, Inc. (“Qualcomm Technologies”), its affiliates and/or licensors described in this Material, and shall not be used for any other purposes. If this Material is marked as “Qualcomm Internal Use Only”, no license is granted to You herein, and You must immediately (a) destroy or return this Material to Qualcomm Technologies, and (b) report Your receipt of this Material to <mailto:qualcomm.support@qti.qualcomm.com>. This Material may not be altered, edited, or modified in any way without Qualcomm Technologies’ prior written approval, nor may it be used for any machine learning or artificial intelligence development purpose which results, whether directly or indirectly, in the creation or development of an automated device, program, tool, algorithm, process, methodology, product and/or other output. Unauthorized use or disclosure of this Material or the information contained herein is strictly prohibited, and You agree to indemnify Qualcomm Technologies, its affiliates and licensors for any damages or losses suffered by Qualcomm Technologies, its affiliates and/or licensors for any such unauthorized uses or disclosures of this Material, in whole or part.

Qualcomm Technologies, its affiliates and/or licensors retain all rights and ownership in and to this Material. No license to any trademark, patent, copyright, mask work protection right or any other intellectual property right is either granted or implied by this Material or any information disclosed herein, including, but not limited to, any license to make, use, import or sell any product, service or technology offering embodying any of the information in this Material.

THIS MATERIAL IS BEING PROVIDED “AS IS” WITHOUT WARRANTY OF ANY KIND, WHETHER EXPRESSED, IMPLIED, STATUTORY OR OTHERWISE. TO THE MAXIMUM EXTENT PERMITTED BY LAW, QUALCOMM TECHNOLOGIES, ITS AFFILIATES AND/OR LICENSORS SPECIFICALLY DISCLAIM ALL WARRANTIES OF TITLE, MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, COMPLETENESS OR ACCURACY, AND ALL WARRANTIES ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. MOREOVER, NEITHER QUALCOMM TECHNOLOGIES, NOR ANY OF ITS AFFILIATES AND/OR LICENSORS, SHALL BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY EXPENSES, LOSSES, USE, OR ACTIONS HOWSOEVER INCURRED OR UNDERTAKEN BY YOU IN RELIANCE ON THIS MATERIAL.

Certain product kits, tools and other items referenced in this Material may require You to accept additional terms and conditions before accessing or using those items.

Technical data specified in this Material may be subject to U.S. and other applicable export control laws. Transmission contrary to U.S. and any other applicable law is strictly prohibited.

Nothing in this Material is an offer to sell any of the components or devices referenced herein.

This Material is subject to change without further notification.

In the event of a conflict between these Terms of Use and the Website Terms of Use on www.qualcomm.com, the *Qualcomm Privacy Policy* referenced on www.qualcomm.com, or other legal statements or notices found on prior pages of the Material, these Terms of Use will control. In the event of a conflict between these Terms of Use and any other agreement (written or click-through, including, without limitation any non-disclosure agreement) executed by You and Qualcomm Technologies or a Qualcomm Technologies affiliate and/or licensor with respect to Your access to and use of this Material, the other agreement will control.

These Terms of Use shall be governed by and construed and enforced in accordance with the laws of the State of California, excluding the U.N. Convention on International Sale of Goods, without regard to conflict of laws principles. Any dispute, claim or controversy arising out of or relating to these Terms of Use, or the breach or validity hereof, shall be adjudicated only by a court of competent jurisdiction in the county of San Diego, State of California, and You hereby consent to the personal jurisdiction of such courts for that purpose.

2) Trademark and Product Attribution Statements.

Qualcomm is a trademark or registered trademark of Qualcomm Incorporated. Arm is a registered trademark of Arm Limited (or its subsidiaries) in the U.S. and/or elsewhere. The Bluetooth® word mark is a registered trademark owned by Bluetooth SIG, Inc. Other product and brand names referenced in this Material may be trademarks or registered trademarks of their respective owners.

Snapdragon and Qualcomm branded products referenced in this Material are products of Qualcomm Technologies, Inc. and/or its subsidiaries. Qualcomm patented technologies are licensed by Qualcomm Incorporated.

THE DOCUMENTATION ACCOMPANYING THE MATERIALS AND/OR RELEVANT PRODUCTS AND SERVICE OFFERINGS MAY INCLUDE IMPORTANT USE LIMITATIONS. ANY DEVIATIONS FROM APPLICABLE USE LIMITATIONS MAY ADVERSELY IMPACT PERFORMANCE, DURABILITY, QUALITY OR SAFETY. YOU ASSUME ALL RISKS AND LIABILITIES ASSOCIATED WITH ANY DEVIATIONS.